



Billet Wheel Adapters & Spacers

Important notes:

- 1) Additional lug nuts may be required for your application. Please check before installation.
- 2) Always use jack stands when removing wheels.
- 3) Check wheels and rotors/drums for any rivet heads, burrs, scale, rust or other obstruction that would prevent the adapter from seating properly.
- 4) Check vehicle studs and nuts to ensure they do not contact or interfere with the wheel after the adapter is bolted in place. The wheel must sit flush against the adapter.
- 5) Hand torque all lug nuts to factory specifications.
- 6) Check for wheel and tire clearance lock to lock and fender to tire clearance before driving.
- 7) Check and re-torque wheel nuts every 3,000 kms.

Torque specs:

12mm x 1.5 = 87 ft/lbs.

14mm x 1.5 = 139 ft/lbs.

Product Disclaimer:

- 1) Product is non-returnable once installed, modified or altered in any way. **DO NOT MODIFY OR ALTER THE ADAPTER IN ANY WAY.**
- 2) Check thread length of studs to lug nuts. Minimum effective thread length of 9/16" is required.
- 4) There is no warranty stated or implied. The buyer accepts all responsibility of any costs, repairs and services. The manufacturer, distributor & retailer accepts no responsibility for fitment, application or installation.